





Instructions on using Chromebook AV Displays

1. Startup

Plug in the units power brick power supply and switch on. The unit should power up and display a login prompt awaiting password input

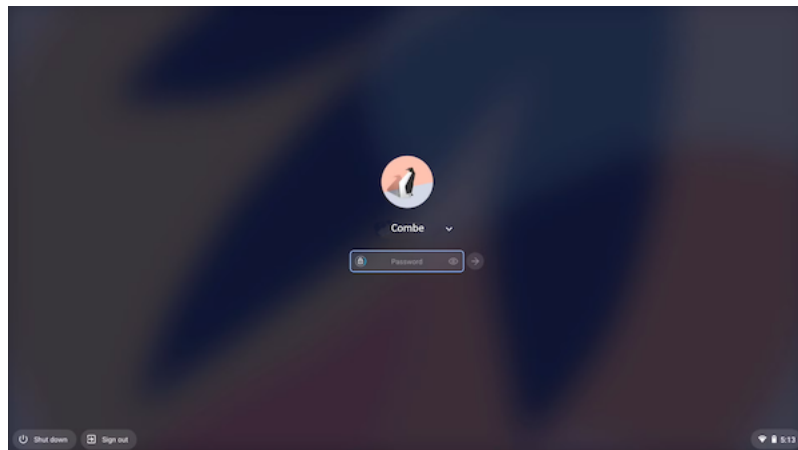

Tap inside the password box and the onscreen touch keyboard will appear

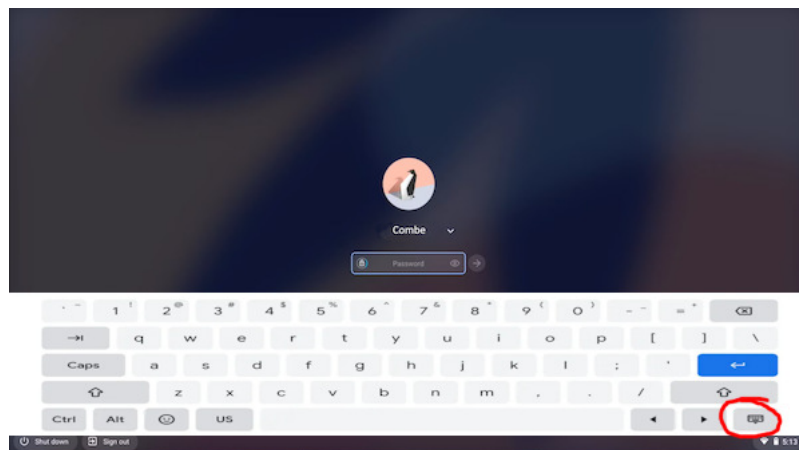


Enter the password `77Promo1852` and touch the return key on keyboard or the → next to the password prompt. If Password correct the unit will login and continue startup.

To close the keyboard at any time touch the key that looks like a keyboard, circled red here. It may be a different location depending on keyboard language and software version.

Once the unit has fully booted up and logged in the Combe Mill desktop background (as below) will be displayed

COMBE MILL SOCIETY

INSTRUCTIONS ON USING CHROMEBOOK AV DISPLAYS

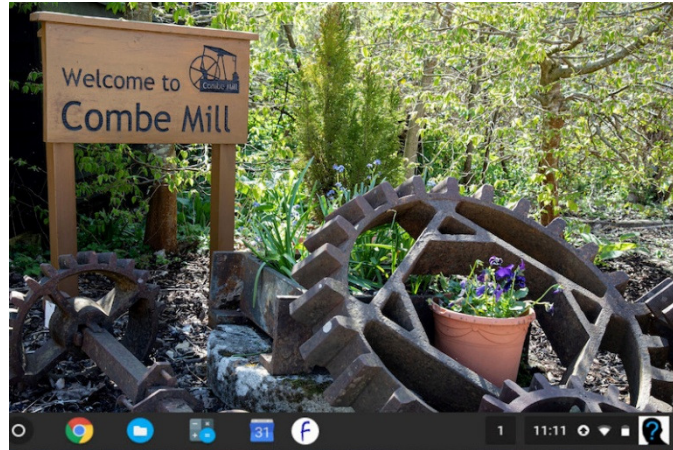

Please wait for at least two minutes as the next process should happen automatically.

The Fully Kiosk Browser should auto-start but it can take upto 2 minutes for it to display, once running the AV Interactive control screen will open fullscreen



If the AV Interactive control screen does not appear after 2 minutes, run Fully Kiosk Browser by touching its link in the Chrome OS Shelf (equivalent to windows taskbar at bottom of screen). The number of icons and layout may change but the icon will be present



If the browser still doesn't run and show the AV Interactive control screen please contact Tony Simmons or Dave Ralphs.




2. Normal operation

During normal operation the AV Interactive control screen is shown



A user selects a video by touching on or near the desired yellow “button” and the video will play fullscreen. The video can be paused/resumed by touching the center of the screen. To close the video touch the “Close Video” button (arrowed below) where the user will be returned to the AV Interactive control screen.

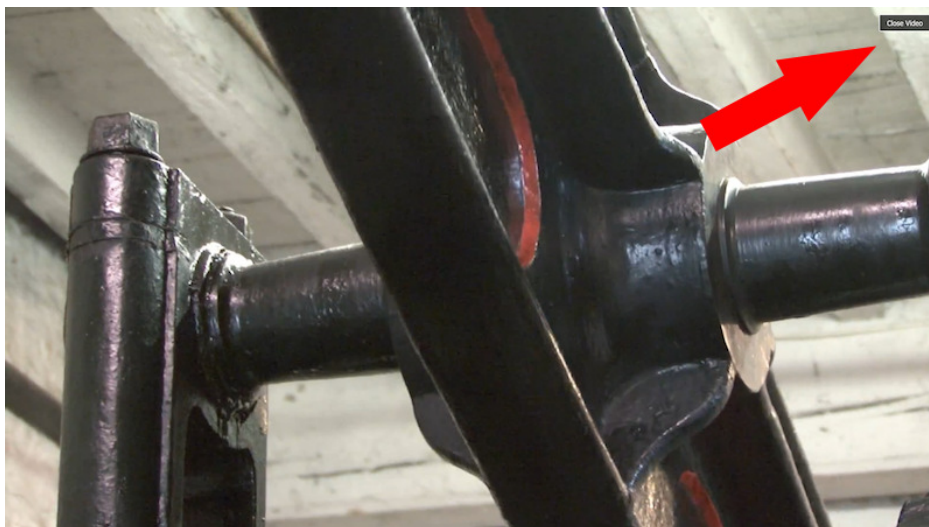

Should no user select any video for approximately 5 minutes a screensaver will commence showing a selection of photographs of the mill along with a message “Touch screen to return to AV Menu and presentation”.



The screensaver is used to prevent “burn-in” although it is rare on modern screens.

3. Shutting down the unit.

No harm will come to the unit if it is accidentally powered down whilst in use although an “improper shutdown” message may be displayed in the notification area of the Chrome OS Shelf on next login.

To shut down

Touch screen so that the AV Interactive control screen is shown, then swipe across the screen from far left for a few centimeters




This should reveal the Fully Kiosk browser application menu. If it doesn't appear – try again.

COMBE MILL SOCIETY

INSTRUCTIONS ON USING CHROMEBOOK AV DISPLAYS



Click/Touch the “Exit Fully” icon. A “Do you want to exit Fully Kiosk Browser yes/no” message will appear. Click YES

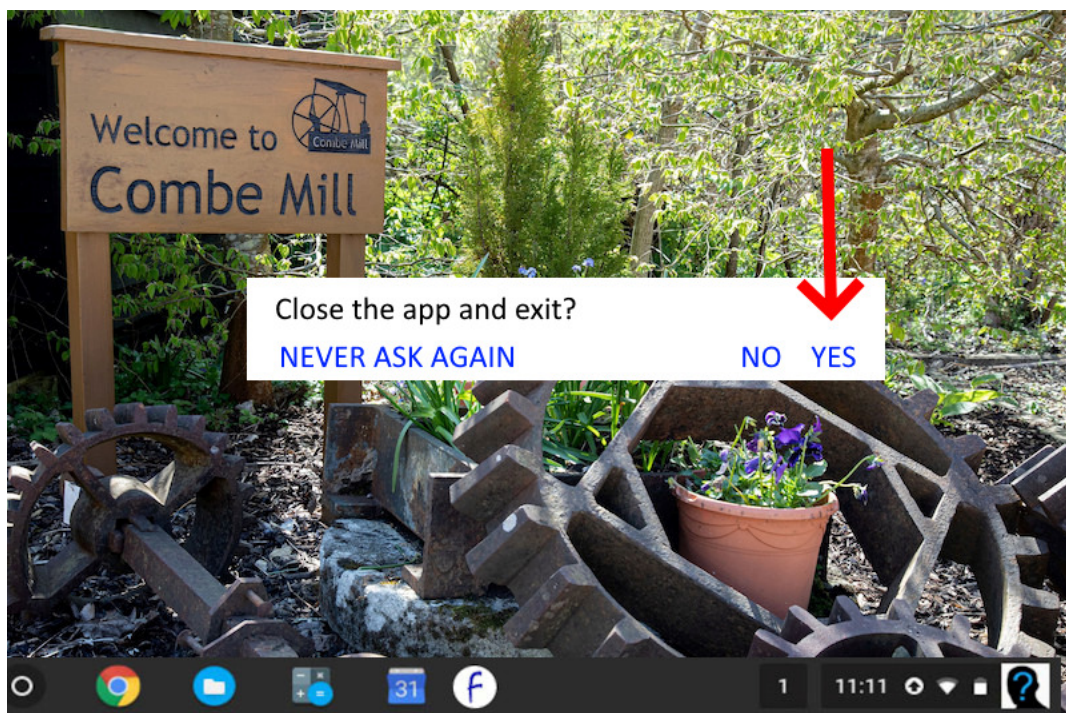


Fully Kiosk Browser will close leaving the desktop displayed.

COMBE MILL SOCIETY

INSTRUCTIONS ON USING CHROMEBOOK AV DISPLAYS



Open the ChromeOS system tray located in the bottom-right, accessible by clicking the time, Wi-Fi, and battery icons (pinpointed in red above) near the bottom right of the shelf to expand the system tray.

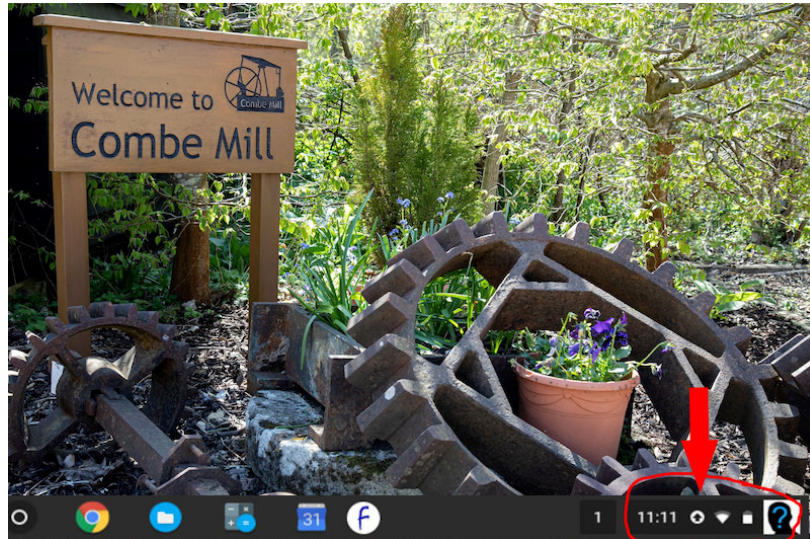

Click the power icon, highlighted in the image below.

The Chromebase unit will shut down and once the screen goes off the power may be turned off. If desired unplug the power brick from socket.

